














LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Argus	DC-3520/3640 QC-5430		•	•	
BenQ	DC C35/40/50/51/60/62				•
	DC C500			•	
	DC C530			•	
	DC C630			•	
	DC C800			•	
	DC E520+		•		
	DC E600		•		
	DC X600	•			
	DC-2410				•
Canon	Digital IXUS i/i5	•			
	Digital IXUS II/30/40		•		
	IXUS 30	•			
	IXUS 40	•			
	IXUS 50	•			
	IXUS 70		•		
	IXUS V		•		
	PowerShot A510/520				•
	PowerShot A530				•
	PowerShot A540				•
	PowerShot A700				•
	PowerShot A710 IS				•
	PowerShot S110		•		
	PowerShot SD 600/Digital IXUS 60		•		
	PowerShot SD 630/Digital IXUS 65		•		
	PowerShot SD10/SD20/IXY Digital	•			
	PowerShot SD30		•		
	PowerShot SD40/Ixus i7		•		
	PowerShot SD400	•			
	PowerShot SD450		•		
	PowerShot SD550		•		
	PowerShot SD700 IS/Digital IXUS 800 IS		•		
	PowerShot SD800 IS/Digital IXUS 850 IS			•	
	PowerShot SD900 IS/Digital IXUS 900 Ti		•		

LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30	
Casio	EXILIM EX-M20U/S20U	•				
	EXILIM EX-S100	•				
	Exilim EX-S600D	•				
	EXILIM EX-Z10		•			
	Exilim EX-Z1000		•			
	EXILIM EX-Z1050		•			
	EXILIM EX-Z110		•			
	EXILIM EX-Z120		•			
	EXILIM EX-Z3/Z4/Z4U	•				
	EXILIM EX-Z30/Z40/Z40LE	•				
	Exilim EX-Z5		•			
	EXILIM EX-Z50/Z55		•			
	EXILIM EX-Z500	•				
	EXILIM EX-Z57/Z750		•			
	Exilim EX-Z60	•				
	Exilim EX-Z600	•				
	Exilim EX-Z7	•				
	Exilim EX-Z70	•				
	EXILIM EX-Z75	•				
	Exilim EX-Z850		•			
EX-S770			•			
QV-R3/R4			•			
QV-R40/41/51/61/62			•			
Concord	1500			•		
	3047		•			
	Eye-Q 3103				•	
	Eye-Q 5345Z			•		
Contax	i4R		•			
DXG	305V				•	
	308				•	
	321				•	
	409		•			
	568				•	
Epson	L500V			•		
	Photo PC L-410			•		
Fuji	FinePix A345/A350		•			
	FinePix A400/A500/A510			•		
	FinePix A600 Zoom			•		
	FinePix A700			•		
	FinePix F30		•			
	FinePix F31fd		•			
	FinePix F470		•			
	FinePix M603				•	
	FinePix V10			•		
	FinePix Z3		•			
	FinePix Z5fd		•			






LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
HP	Photosmart M22/M23				•
	Photosmart M425			•	
	Photosmart M525			•	
	Photosmart M527				•
	Photosmart R507		•		
	Photosmart R607 SE		•		
	Photosmart R707/R717				•
	Photosmart R725			•	
	Photosmart R727			•	
	Photosmart R817			•	
	Photosmart R818			•	
Kodak	Easyshare C330				•
	Easyshare C340				•
	Easyshare C360				•
	Easyshare C433				•
	Easyshare C443				•
	Easyshare C530			•	
	Easyshare C533				•
	Easyshare C643			•	
	Easyshare C663			•	
	Easyshare C743			•	
	Easyshare C875				•
	Easyshare Picture Viewer	•			
	Easyshare V530		•		
	Easyshare V550		•		
	Easyshare V603		•		
V550		•			
Kyocera	Finecam S3/S3L/S3X/S4/S5/S5R			•	
Leica	C-Lux 1		•		
Minox	DC-6211		•		
Mustek	DV-3032				•
	DV-4000			•	
	GSmart D35			•	
	MDC-5000			•	
Nikon	Coolpix 4600/5600			•	
	Coolpix 5900/7900				•
	Coolpix 7600				•
	Coolpix L1				•
	Coolpix L2, L3, L4			•	
	Coolpix L5				•
	Coolpix L6			•	
	Coolpix P1				•
	Coolpix P2				•
	Coolpix P3, P4			•	
	Coolpix S5		•		
	Coolpix S8		•		
	Coolpix S9		•		






LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Olympus	μ digital 600			•	
	AZ-1/Ferrari Digital			•	
	C-40 Zoom/D-40 Zoom				•
	D-535z/C-370z				•
	D-630			•	
	FE-100				•
	FE-110				•
	FE-115				•
	FE-120			•	
	FE-130			•	
	FE-140			•	
	FE-150		•		
	FE-170			•	
	FE-180			•	
	FE-190	•			
	FE-200		•		
	FE-210			•	
	FE-230/240/250	•			
	IR-500				•
	SP-310				•
	SP-320				•
	SP-350				•
	Stylus 1000/Mju Digital 1000		•		
	Stylus 700		•		
	Stylus 710		•		
	Stylus 720SW		•		
	Stylus 725AW		•		
	Stylus 730/Mju Digital 730			•	
	Stylus 740/Mju Digital 740		•		
	Stylus 750/Mju Digital 750		•		
	Stylus 760/Mju Digital 760			•	
	Stylus 770SW		•		
Stylus 810		•			
Stylus Verve/Verve S/μ-Mini/Mju Mini Digital		•			






LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Panasonic	DMC- FX07		•		
	DMC-FX01		•		
	DMC-FX1/FX1BS/FX5/FX5BS		•		
	DMC-FX2/FX2B/FX7/FX7B		•		
	DMC-FX3		•		
	DMC-FX8		•		
	DMC-FX9		•		
	DMC-LC33/43				•
	DMC-LC50/50B/70/70B/80/80B				•
	DMC-LC80				•
	Lumix DMC-FX10/FX12		•		
	Lumix DMC-FX30		•		
	Lumix DMC-LS1			•	
	Lumix DMC-LS60/LS75			•	
	SV-AV100			•	
SV-AV25			•		
Pentax	Optio 30				•
	Optio 50			•	
	Optio 50L			•	
	Optio 60			•	
	Optio A10		•		
	Optio A20		•		
	Optio E10			•	
	Optio E20			•	
	Optio E30			•	
	Optio L20	•			
	Optio M10			•	
	Optio M20		•		
	Optio M30		•		
	Optio S/S4/S4i/S5i	•			
	Optio S30				•
	Optio S40		•		
	Optio S45		•		
	Optio S50		•		
	Optio S55		•		
	Optio S5n	•			
	Optio S5z		•		
	Optio S6	•			
	Optio S60		•		
	Optio S7	•			
	Optio SV	•			
Optio T10		•			
Optio T30		•			
Ricoh	Caplio R30		•		
	Caplio R40		•		
	Caplio R5		•		

LOWEPRO NAPOLI SERIES MATRIX 2007

		 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
Rollei	da5324			•	
	Prego da6			•	
	Prego dp4200		•		
	Prego dp5300/6300				•
	Prego dp6200		•		
	Prego dp6500			•	
Samsung	Digimax 35MP3				•
	Digimax A7			•	
	Digimax i5	•			
	Digimax i6 PSP		•		
	Digimax L60		•		
	Digimax L70			•	
	Digimax S1000			•	
	Digimax S500/S600/S800			•	
	Digimax S700			•	
	Digimax U-CA 401			•	
	Digimax U-CA 501/505		•		
	i70		•		
	L77		•		
	NV10			•	
	NV3		•		
	S830/S1030			•	
	SC-M105		•		
	SC-X105L			•	
Sanyo	DSC-S5 Xacti			•	
	Xacti DSC-E6			•	
	Xacti DSC-S6			•	
Sony	DCR-IP1				•
	DSC-L1		•		
	DSC-N1		•		
	DSC-N2		•		
	DSC-S40				•
	DSC-S500			•	
	DSC-T10	•			
	DSC-T30		•		
	DSC-T33		•		
	DSC-T5		•		
	DSC-T50		•		
	DSC-T7		•		
	DSC-T9	•			
	DSC-W100			•	
	DSC-W15				•
	DSC-W17				•
DSC-W30, W50, W70		•			
DSC-W5/W7				•	
Toshiba	PDR-3340				•
UMAX	Astrapix 610			•	
	Astrapix A680	•			
Vivitar	DVR-210				•
	V3105		•		

LOWEPRO NAPOLI SERIES MATRIX 2007

	 Napoli 5	 Napoli 10	 Napoli 20	 Napoli 30
V3315				•
V3345/3355		•		
V3650			•	
V3695				•
V3750			•	
V3826				•
V5388			•	
V6300			•	
V7310			•	
Vivicam 10				•
Vivicam 25		•	•	
Vivicam 3780	•			
Vivicam 4345			•	
Vivicam 5385			•	