

LOWEPRO REZO SERIES MATRIX 2007

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60
Argus	DC-3200			•				
	DC-3520/3640			•				
	DC-3810GB							•
	QC-5430			•				
BenQ	DC C35/40/50/51/60/62				•			
	DC C500		•	•				
	DC C530			•				
	DC C630			•				
	DC C800			•				
	DC E30/40/41/43/53			•				
	DC E520+		•					
	DC E600		•					
	DC S40					•		
	DC X600		•					
	DC-2410					•		
	DC-3410					•		

LOWEPRO REZO SERIES MATRIX 2007



Rezo 10



Rezo 15



Rezo 20



Rezo 30



Rezo 40



Rezo 50



Rezo 60

Canon	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 40	Rezo 50	Rezo 60
DC-10							
DC-20							
DC21/DC22							
Digital IXUS 430/500		•	•				
Digital IXUS i/i5	•	•					
Digital IXUS II/30/40		•					
Elura 85							
Elura 90							
EOS 20D w/kit lens							
EOS 30D w/small zoom							
EOS 5D w/compact zoom							
EOS Digital Rebel Xti/400D w/ compact zoom							
EOS Rebel XT/350D with kit lens							
IXUS 30	•	•					
IXUS 40	•	•					
IXUS 50	•						
IXUS 70		•					
IXUS V				•			
MV800							
MV830i							
MV850i							
MV890							
MV900							
MV930/940/950/960							
MX330i							
MX430							
MX450/460							
Optura 50							
Optura 60							
PowerShot A300/A310					•		
PowerShot A400					•		
PowerShot A410					•		
PowerShot A420					•		
PowerShot A430					•		
PowerShot A510/520					•		
PowerShot A530						•	
PowerShot A540						•	
PowerShot A610							•
PowerShot A620							•
PowerShot A630						•	
PowerShot A640						•	
PowerShot A700						•	
PowerShot A710 IS						•	
PowerShot A80/A85						•	
PowerShot A95						•	
PowerShot G6							•
PowerShot G7							•
PowerShot Pro 1							
PowerShot S110				•			
PowerShot S2 IS							
PowerShot S3 IS							
PowerShot S60					•		
PowerShot S70					•		
PowerShot S80					•		
PowerShot SD 600/Digital IXUS 60		•					
PowerShot SD 630/Digital IXUS 65		•					
PowerShot SD10/SD20/IXY Digital	•	•					
PowerShot SD30		•					
PowerShot SD40/Ixus i7		•					









*Availability may vary depending on country and location

LOWEPRO REZO SERIES MATRIX 2007









		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60	
	PowerShot SD400	•	•						
	PowerShot SD450		•						
	PowerShot SD550			•					
	PowerShot SD700 IS/Digital IXUS 800 IS		•						
	PowerShot SD800 IS/Digital IXUS 850 IS		•						
	PowerShot SD900 IS/Digital IXUS 900 Ti		•						
	ZR100								
	ZR200								
	Casio	EXILIM EX-M20U/S20U	•	•					
		EXILIM EX-P600/P700						•	
EXILIM EX-S100		•	•						
Exilim EX-S600D		•							
EXILIM EX-Z10			•						
Exilim EX-Z1000			•						
EXILIM EX-Z1050			•						
EXILIM EX-Z110			•						
EXILIM EX-Z120			•						
EXILIM EX-Z3/Z4/Z4U		•	•						
EXILIM EX-Z30/Z40/Z40LE			•						
Exilim EX-Z5		•							
EXILIM EX-Z50/Z55			•						
EXILIM EX-Z500			•						
EXILIM EX-Z57/Z750			•						
Exilim EX-Z60			•						
Exilim EX-Z600		•							
Exilim EX-Z7			•						
Exilim EX-Z70			•						
EXILIM EX-Z75			•						
Exilim EX-Z850			•						
EXILIM Pro EX-P505								•	
EX-S770			•						
QV-R3/R4				•					
QV-R40/41/51/61/62				•					
Concord	1500								
	3047								
	4042								
	ES 500Z			•		•			
	Eye-Q 3040					•			
	Eye-Q 3103					•			
	Eye-Q 3341z			•					
	Eye-Q 3346Z			•					
	Eye-Q 4060z					•			
	Eye-Q 4360Z			•					
	Eye-Q 5062AF			•					
	Eye-Q 5345Z					•			
	Eye-Q 642					•			
	Eye-Q Duo 2000					•			
	Contax	i4R		•					
SL300RT		•							
TVS						•			
U4R			•						
Creative	DC-Cam 3000/3200z					•			

*Availability may vary depending on country and location








LOWEPRO REZO SERIES MATRIX 2007

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60
DXG	202V							
	305V				•			
	308			•	•			
	321			•	•			
	409	•						
	503			•				
	528			•				
	568				•			
Epson	L500V			•				
	Photo PC L-410			•				
Fuji	A-205							•
	FinePix A330/340				•			
	FinePix A345/A350			•				
	FinePix A400/A500/A510			•				
	FinePix A600 Zoom			•				
	FinePix A700			•				
	FinePix F30		•					
	FinePix F31fd		•					
	FinePix F470		•					
	FinePix F5 Pro w/compact zoom							
	FinePix F650 Zoom			•				
	FinePix F710/F810				•			
	FinePix M603			•				
	FinePix S5600							
	FinePix S6000							
	FinePix S6500fd							
	FinePix S6900							
	FinePix S9000							
	FinePix S9100/9600							
	FinePix S9500							
	FinePix V10		•					
	FinePix Z3	•						
	FinePix Z5fd	•						
Q1 Digital					•			
Hitachi	DZ-GX3100E							
	DZ-GX3200E							
	DZ-MV380							
	DZ-MV550/MV580							
	DZ-MV730A							
	DZ-MV780A							









LOWEPRO REZO SERIES MATRIX 2007

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60
HP	Photosmart C612/612xi							•
	Photosmart C618							•
	Photosmart E317			•				
	Photosmart E327			•				
	Photosmart M22/M23			•				
	Photosmart M417/M517				•			
	Photosmart M425			•				
	Photosmart M525		•					
	Photosmart M527				•			
	Photosmart R507		•	•				
	Photosmart R607 SE			•				
	Photosmart R707/R717				•			
	Photosmart R725		•					
	Photosmart R727		•					
	Photosmart R817			•				
Photosmart R818			•					
Photosmart R927			•					
Photosmart R967			•					
JVC	Everio GZ-MG57EK							
	Everio GZ-MG77U							
	GD-D370							
	GR-D350AA							
	GR-D650							
	GR-D73US							
	GR-DF430US							
	GR-DVL 160/DVL367							
	GR-X5							
	GZ-M50S							
	GZ-MG26							
	GZ-MG505HD							

LOWEPRO REZO SERIES MATRIX 2007

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60
Kodak	DX6490/7590/Z7590							•
	DX7630/7440						•	•
	Easyshare C300						•	
	Easyshare C310				•			
	Easyshare C330				•			
	Easyshare C340				•			
	Easyshare C360				•			
	Easyshare C433				•			
	Easyshare C443				•			
	Easyshare C530			•				
	Easyshare C533				•			
	Easyshare C643				•			
	Easyshare C663				•			
	Easyshare C743				•			
	Easyshare C875						•	
	Easyshare LS743/753			•				
	Easyshare One				•			
	Easyshare P712							
	Easyshare P850							
	Easyshare P880							
	Easyshare Picture Viewer	•						
	Easyshare V530		•					
	Easyshare V550			•				
	Easyshare V570				•			
	Easyshare V603							
	Easyshare V610						•	
	Easyshare Z612							
	Easyshare Z650							
	Easyshare Z700							•
	Easyshare Z705				•			
Easyshare Z710								
Easyshare Z730						•	•	
Easyshare Z740						•	•	
Easyshare Z760						•	•	
V550			•					
Konica/Minolta	DiMAGE Z1 Thru Z3 and Z10							
	DiMAGE Z5/Z20							
	Dynax/Maxxum 5d w/short zoom							
	Maxxum/Dynax 7D w/short zoom							
Kyocera	EZ Digital 1.3			•				
	Finecam L3V/L4V/L30				•			
	Finecam S3/S3L/S3X/S4/S5/S5R			•				
	M400R							•
	SL300R/400R	•						
Leica	C-Lux 1		•	•				
	Digilux 2							
	Digilux 3							
	D-Lux 3				•			
	M8 w/compact zoom							
V-Lux 1								
Minox	DC-6211		•					

LOWEPRO REZO SERIES MATRIX 2007

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60
Mustek	DV-3032						•	
	DV-4000				•			
	DV-4500							
	G-Smart 350						•	•
	GSmart D35				•			
	MDC-5000			•				
	MDC-6500z							•
Nikon	Coolpix 4500							•
	Coolpix 4600/5600				•			
	Coolpix 4800							•
	Coolpix 5700/8700							
	Coolpix 5900/7900			•				
	Coolpix 7600				•			
	Coolpix 8400							
	Coolpix 8800							
	Coolpix L1			•	•			
	Coolpix L2, L3, L4		•					
	Coolpix L5						•	
	Coolpix L6			•				
	Coolpix P1			•				
	Coolpix P2			•				
	Coolpix P3, P4			•				
	Coolpix S10						•	
	Coolpix S5	•						
	Coolpix S6		•					
	Coolpix S7c		•					
	Coolpix S8		•					
	Coolpix S9	•						
	D200 w/compact zoom							
	D40 w/compact zoom							
	D50 w/kit zoom							
	D70 w/kit zoom							
D80 w/Compact Zoom								

LOWEPRO REZO SERIES MATRIX 2007



Rezo 10



Rezo 15



Rezo 20



Rezo 30



Rezo 40



Rezo 50



Rezo 60

Olympus	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 40	Rezo 50	Rezo 60
μ digital 600			•				
AZ-1/Ferrari Digital		•					
AZ2			•				
C-180					•		
C-300/D-550 Zoom					•		
C-350/C-460z/460 Del Sol						•	
C-360/C-450/C-460/D-395/D-575/D-580Z					•		
C-40 Zoom/D-40 Zoom					•		
C-470/D-590					•		
C-50/C-60					•		
C-5000 Zoom							•
C-5060/C-7070 Wide Zoom							•
C-5500/C-55 Sport Zoom							•
C-7000/C-70						•	•
C-745/750/760/765 UZ							•
C-765/770 Ultra Zoom							•
C-8080 Wide Zoom							•
D-370L/D-380						•	
D-390					•		
D-425			•				
D-435					•		
D-510 Zoom					•		
D-520					•		
D-535z/C-370z			•		•		
D-540/560/565					•		
D-545					•		
D-595					•		
D-630		•					
E-1 w/compact zoom							
Evolt E-330 w/compact zoom							
Evolt E-400 w/compact zoom							
EVOLT E-500 w/compact zoom							
EVOLT/E-300 w/14-45mm zoom							
FE-100					•		
FE-110					•		
FE-115					•		
FE-120			•				
FE-130			•				
FE-140			•				
FE-150			•				
FE-170			•				
FE-180		•					
FE-190		•					
FE-200		•					
FE-210			•				
FE-230/240/250	•						
IR-300			•				
IR-500		•					
M:Robe 500		•					
SP-310					•		
SP-320					•		
SP-350					•		
SP-500UZ							•
SP-510UZ							•
SP-550UZ							
Stylus 1000/Mju Digital 1000		•					
Stylus 700		•					
Stylus 710		•					
Stylus 720SW		•					

LOWEPRO REZO SERIES MATRIX 2007



Rezo 10



Rezo 15



Rezo 20



Rezo 30



Rezo 40



Rezo 50



Rezo 60

Stylus 725AW							
Stylus 730/Mju Digital 730		•					
Stylus 740/Mju Digital 740		•					
Stylus 750/Mju Digital 750		•					
Stylus 760/Mju Digital 760			•				
Stylus 770SW		•					
Stylus 800/Mju Digital 800			•	•			
Stylus 810		•					
Stylus Verve/Verve S/μ-Mini/Mju Mini Digital		•					

LOWEPRO REZO SERIES MATRIX 2007



Rezo 10

Rezo 15

Rezo 20

Rezo 30

Rezo 40

Rezo 50

Rezo 60

Panasonic		Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 40	Rezo 50	Rezo 60
DMC- FX07				•				
DMC LZ3/LZ5						•		
DMC-F1S/F1K					•			
DMC-F7				•				
DMC-FX01			•					
DMC-FX1/FX1BS/FX5/FX5BS			•	•				
DMC-FX2/FX2B/FX7/FX7B			•	•				
DMC-FX3				•				
DMC-FX50				•				
DMC-FX8				•				
DMC-FX9				•				
DMC-FZ50								
DMC-FZ7								
DMC-LC1/LC1B								
DMC-LC20					•			
DMC-LC33/43					•			
DMC-LC40								•
DMC-LC5								•
DMC-LC50/50B/70/70B/80/80B					•			
DMC-LC80					•			
DMC-LZ1/LZ2						•		
Lumix DMC LS2					•			
Lumix DMC-FX10/FX12			•					
Lumix DMC-FX30			•					
Lumix DMC-FZ8								•
Lumix DMC-L1 w/compact zoom								
Lumix DMC-LS1				•				
Lumix DMC-LS60/LS75				•				
Lumix DMC-LX1							•	
Lumix DMC-LX2							•	
Lumix DMC-LZ6/LZ7				•				
Lumix DMC-TZ1					•			
Lumix DMC-TZ2/TZ3					•			
NV10			•					
NV-GS1/GS4/GS5								
NV-GS11B/15B								
NV-GS180								
NV-GS22B/33B/55B								•
NV-GS27								
NV-GS50								•
NV-GS500								
NV-GX7								
PalmCam PV-DC2090					•			
PV-GS150								
PV-GS19								
PV-GS250								
PV-GS31								
PV-GS35								
PV-GS39								
PV-GS55								
SDR-S150								•
SV-AS10				•				
SV-AV100					•			
SV-AV25			•	•				
SV-AV50				•				
VDR-D250								
VDR-M53								
VDR-M75								
Pentax	*ist D w/kit zoom							

*Availability may vary depending on country and location

LOWEPRO REZO SERIES MATRIX 2007



Rezo 10



Rezo 15



Rezo 20



Rezo 30



Rezo 40










Rezo 50



Rezo 60

	*ist DL w/kit zoom						
	*ist DS w/kit zoom						
	*st DS 2 w/kit zoom						
	K100D w/compact Zoom						
	K110D w/compact zoom						
	Optio 30			•			
	Optio 33L/33LF				•		
	Optio 33WR/43WR			•			
	Optio 450/550/555				•		
	Optio 50		•				
	Optio 50L		•				
	Optio 60			•			
	Optio 750Z					•	
	Optio A10		•				
	Optio A20		•				
	Optio E10			•			
	Optio E20			•			
	Optio E30			•			
	Optio L20		•				
	Optio M10		•				
	Optio M20		•				
	Optio M30			•			
	Optio MX/MX4						
	Optio S/S4/S4i/S5i	•	•				
	Optio S30			•			
	Optio S40		•	•			
	Optio S45			•			
	Optio S50		•				
	Optio S55			•			
	Optio S5n		•				
	Optio S5z		•				
	Optio S6		•				
	Optio S60		•				
	Optio S7		•				
	Optio SV		•				
	Optio T10			•			
	Optio T30			•			
	Optio W10			•			
	Optio W20			•			
	Optio X				•		
Polaroid	PhotoMAX 320				•		
	PhotoMAX Fun 640 SE				•		
	PhotoMAX PDC 700						•
	X530						•
RCA	CDS4100						•
	CDS6300						•

LOWEPRO REZO SERIES MATRIX 2007

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60
Ricoih	Caplio 400G Wide							•
	Caplio 500G Wide							•
	Caplio G3/G4				•			
	Caplio GX/GX-8					•		
	Caplio R1v			•				
	Caplio R30			•				
	Caplio R40		•					
	Caplio R5			•				
	Caplio RR30				•			
	Caplio RX					•		
Rollei	d-24/d-30/d-530 Flex							
	d33/d41						•	•
	da5324			•				
	dp3210							•
	dp8300			•				
	dr 5			•				
	Prego da6			•				
	Prego dp4200		•	•				
	Prego dp5300/6300					•		
	Prego dp6200		•					
	Prego dp6500		•					
	Prego dr5100			•				

LOWEPRO REZO SERIES MATRIX 2007



		Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 40	Rezo 50	Rezo 60
Samsung	Digimax 101/201							•
	Digimax 200				•			
	Digimax 202				•			
	Digimax 240/420						•	
	Digimax 301				•			
	Digimax 330							•
	Digimax 340							•
	Digimax 3500/4500					•		
	Digimax 35MP3					•		
	Digimax 370/430					•		
	Digimax 530					•		
	Digimax 800k				•			
	Digimax A4/A5/A6				•			
	Digimax A40			•	•			
	Digimax A503					•		
	Digimax A55W			•				
	Digimax A7					•		
	Digimax i5			•				
	Digimax i6 PSP			•				
	Digimax L60	•						
	Digimax L70				•			
	Digimax L85					•		
	Digimax Pro 815							
	Digimax S1000			•				
	Digimax S500/S600/S800			•				
	Digimax S700			•				
	Digimax U-CA 3				•			
	Digimax U-CA 401	•						
	Digimax U-CA 501/505			•				
	Digimax U-CA5				•			
	Digimax V5/V6/V50/V70					•		
	Digimax V600/V700				•			
	GX-1L w/compact zoom							
	GX-1X w/compact zoom							
	i70			•				
	L77	•						
	NV10			•				
	NV3	•						
	NV7 OPS						•	
	S830/S1030				•			
	SCD6550 DuoCam							•
	SC-M105				•			
	SC-X105L				•			
	SDC80					•		
	VP-D10							
VP-D101/D103								
VP-D130								
VP-D230/D270i								
VP-D323/D325i								
VP-D361i								
VPD5000i								
VP-D6040i/D6050i								
VP-D80i								
VP-D963 WI								
VP-D97								
VP-W90/VPL700/VPL900								
Sanyo	VPC-C1E Xacti				•			
	VPC-J2 Xacti			•				
	DSC-S5 Xacti			•				

*Availability may vary depending on country and location

LOWEPRO REZO SERIES MATRIX 2007

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60
	VPC DSC-J1				•			
	VPC-AZ3/VPC-MZ3			•				
	VPC-C5 Xacti				•			
	VPC-C6 Xacti				•			
	VPC-J4 Xacti			•				
	VPC-X360				•			
	Xacti DSC-E6		•	•				
	Xacti DSC-S6			•				
Sharp	VE-CG30U/40U							•
	VLZ900H							
Sipix	SC 2300/3300				•			

LOWEPRO REZO SERIES MATRIX 2007



Rezo 10



Rezo 15



Rezo 20



Rezo 30



Rezo 40



Rezo 50



Rezo 60

Sony	Alpha DSLR-A100 w/compact zoom	Rezo 10	Rezo 15	Rezo 20	Rezo 30	Rezo 40	Rezo 50	Rezo 60
	CCD-TRV138							
	DCR-DVD203E							
	DCR-DVD403E							
	DCR-DVD92E							
	DCR-HC14E							
	DCR-HC21E							
	DCR-HC42E							
	DCR-HC90E							
	DCR-IP1				•			
	DCR-PC1000E							
	DCR-PC120							•
	DCR-PC55							
	DCR-PC8							•
	DCR-SR40							
	DCR-TRV280							
	DCR-TRV480							
	DSC-F828							
	DSC-F88			•				
	DSC-H1, H2, H5							
	DSC-L1		•	•				
	DSC-M1				•			
	DSC-M2				•			
	DSC-N1		•					
	DSC-N2		•					
	DSC-P100/P120				•	•		
	DSC-P150/P200			•	•	•		
	DSC-P41/P43			•				
	DSC-P73/93					•		
	DSC-R1							
	DSC-S40				•			
	DSC-S500			•				
	DSC-S60				•			
	DSC-S600				•			
	DSC-S80				•			
	DSC-S90						•	
	DSC-T10	•						
	DSC-T30	•	•					
	DSC-T33		•					
	DSC-T5		•					
	DSC-T50		•					
	DSC-T7	•						
	DSC-T9		•					
	DSC-V3							•
	DSC-W100		•					
	DSC-W15				•			
	DSC-W17				•			
	DSC-W30, W50, W70		•					
	DSC-W5/W7		•	•				
	HDR-HC1							
	HDR-SR1							
	HDR-UX1							
	MVC-CD350							•
	MVC-CD500							
	MVC-FD200							

*Availability may vary depending on country and location

LOWEPRO REZO SERIES MATRIX 2007

		 Rezo 10	 Rezo 15	 Rezo 20	 Rezo 30	 Rezo 40	 Rezo 50	 Rezo 60
Thomson	VMD-160/170 VMD-270							
Toshiba	PDR-3340 PDR-M700 PDR-T30			•		•		•
UMAX	AstraCam 1800 Astrapix 610 Astrapix A680 Powercam Z430	•			•			•
Vivitar	DVR-210 DVR-310 DVR-410 V3105 V3315 V3345/3355 V3625 V3650 V3695 V3705/3715 V3740 V3750 V3755 V3825 V3826 V5388 V6300 V7310 Vivicam 10 Vivicam 25 Vivicam 3780 Vivicam 4000 Vivicam 4345 Vivicam 5385 Vivicam V2775 Vivicam V3200 Vivicam V3500		•	•	•	•	•	•

*Availability may vary depending on country and location

Digital Camera Bags



Rezo 110AW



Rezo 120AW



Rezo 140AW



Rezo 160AW



Rezo 170AW



Rezo TLZ 10



Rezo TLZ 20

Digital Camera Bags



Rezo 110AW



Rezo 120AW



Rezo 140AW



Rezo 160AW



Rezo 170AW



Rezo TLZ 10



Rezo TLZ 20

